

## **USBIO24 VERSION 3 Digital I/O Module**

The USBIO24 VERSION 3 is the third generation of a low-cost integrated module for the input and/or output of digital signals from a computer system by connection to the USB port. The module pin out and firmware are 100% compatible with the first and second version of the USB I/O24 modules.

The module features 24 5V level signal lines individually programmable as input or output as well as capabilities for further expansion via the expansion port. As the module connects to the USB port, multiple modules can be connected to a single PC by the use of a USB hub or hubs. Each module features a serial number and the PC can identify each module uniquely allowing for multiple modules to be connected for a single application. The outputs of the module are able to source or sink up to 30mA per I/O, up to a maximum 50mA per port, to allow for direct connection to a variety of devices.





#### **MODULE FEATURES**

- 24 independently programmable Input / Output Pins Grouped into 3 ports.
- Single module High-Speed Digital Input / Output solution.
- Up to 128 modules can be connected to a single PC with capabilities of further expansion.
- Integrated Type-B USB Connector.
- On-board unique serial number in EEPROM and custom programmable FLASH microcontroller.
- Both USB Enumeration information and Microcontroller can be re-programmed to suit customer needs.
- Module powered by the USB from the PC or by an external power supply.




### **Module Standard Firmware & Software**

- Virtual COM Port driver allows access as a regular serial port.
- Optional DLL based driver available.
- Easy to program using popular development languages C, Basic, Delphi, VB, etc.
- Simple command set for easy control of ports and data transfer.

## **Module Layout and Physical Dimensions**

Shown in the diagram below is the module layout along with the physical dimensions of the unit.

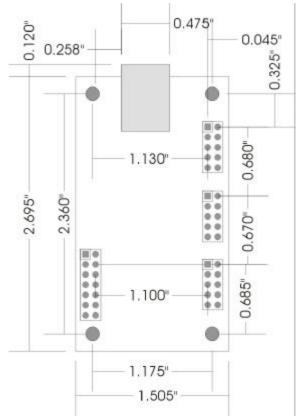


### **Module Connections**

The USB I/O 24 module has 6 user connections and 1 programming connection.



### I/O Port Connector Pin out

Shown in the diagram below is the I/O port Connector for each of the Ports on the module. USB END

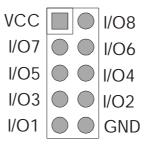

## USB I/O 24 I/O Connector (PORT A, B, C)


Listed in Table 1 below are the connections for the I/O port connector. Ports A,B and C have identical connections.

PIN	SIGNAL	TYPE	DESCRIPTION
#			
1	VCC	PWR	+3.3V to +5V depends on powering SX52 option – May
			be used to supply your circuitry Note A maximum of
			50mA can be drawn when powered through USB
2	I/O8	I/O	Programmable I/O pin with bit value of 128
3	I/O7	I/O	Programmable I/O pin with bit value of 64
4	I/O6	I/O	Programmable I/O pin with bit value of 32
5	I/O5	I/O	Programmable I/O pin with bit value of 16
6	I/O4	I/O	Programmable I/O pin with bit value of 8
7	I/O3	I/O	Programmable I/O pin with bit value of 4
8	I/O2	I/O	Programmable I/O pin with bit value of 2
9	I/O1	I/O	Programmable I/O pin with bit value of 1
10	GND	PWR	Ground signal USB BUS and all I/O



## **Port Expansion Connector Pin out**

Shown in the diagram below is the I/O port Connector for each of the Ports on the module.

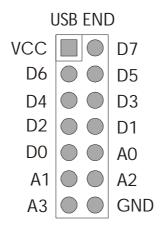


# **USB I/O 24 Port Expansion Connector (PORT EXP)**

PIN	SIGNAL	TYPE	DESCRIPTION
#			
1	VCC	PWR	+3.3V to +5V depends on powering SX52 option – May
			be used to supply your circuitry Note A maximum of
			50mA can be drawn when powered through USB
2	D7	I/O	Data pin on FTD chip / I/O pin with bit value of 128
3	D6	I/O	Data pin on FTD chip / I/O pin with bit value of 64
4	D5	I/O	Data pin on FTD chip / I/O pin with bit value of 32
5	D4	I/O	Data pin on FTD chip / I/O pin with bit value of 16
6	D3	I/O	Data pin on FTD chip / I/O pin with bit value of 8
7	D2	I/O	Data pin on FTD chip / I/O pin with bit value of 4
8	D1	I/O	Data pin on FTD chip / I/O pin with bit value of 2
9	D0	I/O	Data pin on FTD chip / I/O pin with bit value of 1
10	A0	I/O	RA4 on SX52
11	A1	I/O	RA5 on SX52
12	A2	I/O	RA6 on SX52 (currently used for LED Function)
13	A3	I/O	RA7 on SX52
14	GND	PWR	Ground signal USB BUS and all I/O



## **PWR Connector Pinout**

Shown in the diagram below is the I/O port Connector for each of the Ports on the module.



# **USB I/O 24 Port Expansion Connector (PORT EXP)**

PIN	SIGNAL	TYPE	DESCRIPTION
#			
1	VDD	PWR	+3.3V to +5V depends on powering SX52 option – May
			be used to supply your circuitry Note A maximum of
			50mA can be drawn when powered through USB
2	VCC	PWR	+4.35 to 5V VCC supply to FT245BM when in self-
			powered mode. Note: In USB powered mode this pin is
			linked to pin 1 ** <b>NO</b> External power needs to be applied
			when in Bus powered mode**
3	GND	PWR	Ground signal USB BUS and all I/O



### **Communication Protocol**

Listed in the tables below is the communication protocols used to operate the module. The commands that are sent to the unit is in ASCII format and all data that is sent is in Binary format.

#### **Standard Firmware**

COMMAND	DATA	FUNCTION
'?'	Responds 'USB I/O 24'	Identify Device
'A'	1 Byte Port Data	Write to Port A
'B'	1 Byte Port Data	Write to Port B
'C'	1 Byte Port Data	Write to Port C
'a'	Responds with 1 Byte Port Data	Read from Port A
'b'	Responds with 1 Byte Port Data	Read from Port B
'c'	Responds with 1 Byte Port Data	Read from Port C
'!A'	1 Byte Port I/O Data	Write to Port A Direction Register
'!B'	1 Byte Port I/O Data	Write to Port B Direction Register
'!C'	1 Byte Port I/O Data	Write to Port C Direction Register

The commands in the above table are in ASCII format. All Data is sent in Binary format.

#### **Additional VERSION 3 Firmware**

- Transmits on Pin Change without Software Polling (Mode 2)
- Enables setting of the pin pull up feature on SX52
- Enables setting of inputs as CMOS Level or TTL Level or Schmitt Trigger Inputs
- Single I/O pin commands
- SPI interface (available on all ports.)
- Temperature interface to a DS18B20 (available on all I/O pins)

COMMAND	DATA	FUNCTION
'?'	Responds 'USB I/O 24'	Identify Device
'A'	1 Byte Port Data	Write to Port A
'B'	1 Byte Port Data	Write to Port B
C'	1 Byte Port Data	Write to Port C
'a'	Responds with 1 Byte Port Data	Read from Port A
'b'	Responds with 1 Byte Port Data	Read from Port B
'c'	Responds with 1 Byte Port Data	Read from Port C
'!A'	1 Byte Port I/O Data	Write to Port A Direction Register
'!B'	1 Byte Port I/O Data	Write to Port B Direction Register
'!C'	1 Byte Port I/O Data	Write to Port C Direction Register
'H'	1 Byte specifying which I/O pin (0-23)	Set specific I/O Pin High
L'	1 Byte specifying which I/O pin (0-23)	Set specific I/O Pin Low
<b>'</b> #'	Follow with Port write and binary data	Port Pull up feature for SX52
'@'	Follow with Port write and binary data	Set inputs to CMOS/ TTL level
<b>'\$'</b>	Follow with Port write and binary data	Set Port Schmitt trigger enables
'2'		Sets unit to Mode 2 (Enables
		transmit on pin change)
'1'		Sets unit to Mode 1 (Exits Mode 2)

The commands in the above table are in ASCII format. All Data is sent in Binary format.



## **Mode 2 Functional Changes**

All reads have a port designator ('a', 'b' or 'c') before the data.

All auto sends have a port designator ('a', 'b' or 'c') before the data.

All writes to the port that change the port will results in a port data auto send.

#### **SPI Interface**

#### Send / Receive SPI Byte on PORT A

COMMAND	DATA	REPLY	FUNCTION
'S'	1 Byte of data sent on	1 Byte of data received on	Send / Receive SPI
	SPI Bus	SPI Bus	Byte on PORT A

### Send / Receive SPI Byte on PORT B

COMMAND	DATA	REPLY	FUNCTION
T'	1 Byte of data sent on	1 Byte of data received on	Send / Receive SPI
	SPI Bus	SPI Bus	Byte on PORT B

#### **Send / Receive SPI Byte on PORT C**

COMMAND	DATA	REPLY	FUNCTION
'U'	1 Byte of data sent on	1 Byte of data received on	Send / Receive SPI
	SPI Bus	SPI Bus	Byte on PORT C

#### **Notes on SPI**

Bit 1 is always Clock and must be set as an output from the SPI to function

Bit 2 is always Serial Data Out (MOSI) and must be set as an output from the SPI to function

Bit 3 is always Serial Data In (MISO) and must be set as an input from the SPI to function All other port pins act as normal

Setting the port pin as high or low will set the clock as normally high or low before the SPI transaction begins.

Any of the other pins can be used as SS or CE when SPI is used.

NOTE: This interface will not work with the 50MHz upgrade.



## **Temperature Sensor Interface using DS18B20**

#### **Convert Start**

COMMAND	DATA	REPLY	FUNCTION
<b>'J'</b>	1 Byte specifying	1 Byte Status of Command	Start Conversion
	which pin 0 to 23		

#### **Read Temperature**

COMMAND	DATA	REPLY	FUNCTION
'Κ'	1 Byte specifying	3 Bytes	Read Temperature
	which pin 0 to 23	Byte 1 – Status (see below)	
	_	Byte 2 – MSB of Temperature	
		Byte 3 – LSB of Temperature	

#### Notes on the DS18B20

**Status Bytes** 

- G Command execute normally
- C A CRC error occurred while reading the data
- N No sensor found
- E Bad pin number (only pins 0 to 23 are valid)
- S Bus Shorted (or pull up resistor missing)

The DS18B20 requires a resistor between 1K and 4.7K between the data line and the +5V rail. A DS18S20 may also be used if the higher resolution of the DS18B20 is not required.

NOTE: This interface will not work with the 50MHz upgrade.

#### **LED Function**

The LED function on the USB I/O 24 V3 is to provide a visual indication of when there is data being read by the SX52. This function is standard with all USB I/O 24 V3 but can be removed by reprogramming the SX52 with different firmware and/or removing the 0805 LED.

## Reprogramming and Customising the firmware

In order to reprogram the original or any customized firmware into the USB I/O 24 you will require a SX Key programmer. These programmers are available from Parallax. For further information on these programmers visit <a href="http://www.parallax.com/sx/programming">http://www.parallax.com/sx/programming</a> kits.asp

The firmware for the USB I/O 24 is available on request. Please contact <a href="mailto:support@elexol.com">support@elexol.com</a>

## **50MHz Upgrades**

Upgrades are available to run the SX52 at 50MHz clock speed instead of using the internal 4MHz clock.

### **Accessory Boards**


Accessory boards are available for this product. Please check the Elexol website for further information.



#### **Driver Installation**

Your first choice when using the USBIO24 VERSION 3 is whether you want to use the Virtual COM Port driver or the Direct DLL driver.

For programming simplicity the best driver is the Virtual COM Port and when installed the USBIO24 VERSION 3 will appear in the System Properties / Device Manager as an USB Serial Port (COMn) as follows.

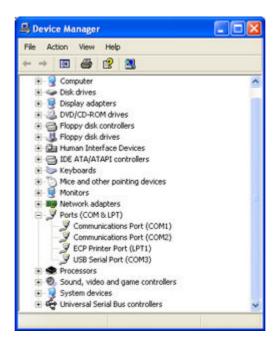

The COM port number will vary depending on the number of existing COM ports on your computer and the number of USBIO24 VERSION 3s or USBMODs connected to your system.

To install the Virtual Com Port drivers, download the driver from our website or the ftdichip.com website and unzip the files to a local directory. Then connect the USBIO24 VERSION 3 and windows will automatically ask for the driver, select to specify a location and browse to the directory where you have unzipped the files. (Use of the Non Plug & Play driver for the USBIO24 VERSION 3 is recommended to avoid a delay on connecting the USBIO24 VERSION 3)

Once the Virtual COM Port is installed it can be programmed exactly as a regular serial COM port using the MSComm control from within VB or API calls from C or other languages. Set the COM port to the same number as appears in the Device Manager, the baud rate, stop bits, parity etc are not used as the device always runs at full speed.

The Direct DLL driver is installed in a similar manner but using the alternative download from the website.

Programming the Direct DLL driver is by call to the DLL Library functions. Please download the Direct DLL programmers guide from the FTDI website.

**NOTE:** Only one driver for the device can be installed at any one time.



### **Programmers Reference Documentation**

Programming the USBIO24 VERSION 3 from Visual Basic using the Virtual COM Port.

To operate the USBIO24 VERSION 3 from within Visual Basic it's best to use the Microsoft MSComm control to access the COM port. To input data from the USBIO24 VERSION 3 you must use the port in binary mode and receiving the data is a bit convoluted.

### **Opening the Port**

As the USBIO24 VERSION 3 unit uses binary data transfer we must use the port in binary mode.

If the port number is incorrect or the USBIO24 VERSION 3 module is not connected then VB will generate an error.

MSComm1.CommPort = 3 'Set this number as shown in the Device Manager MSComm1.InputMode = comInputModeBinary 'Set Binary Input Mode MSComm1.PortOpen = True 'Open the Port

### **Setting the pins as Inputs or Outputs**

Setting the Ports as Input or Output you must determine the value for the pins you want set as inputs.

To set pins I/O1, I/O2 and I/O3 as inputs and the remaining pins as outputs you simply add the bit values of the input pins 1 + 2 + 4 = 7 and thus the value to be placed in the IOValx variable in the following example code is 7.

'Set I/O1, I/O2 & I/O3 of port A to inputs and the rest as outputs.

```
IOValA = 7 'First 3 inputs all the rest as outputs
IOValB = 0 'All outputs
IOValC = 0 'All outputs
MSComm1.Output = "!A" + Chr$(IOValA) 'Write to Port A Direction Register
MSComm1.Output = "!B" + Chr$(IOValB) 'Write to Port B Direction Register
MSComm1.Output = "!C" + Chr$(IOValC) 'Write to Port C Direction Register
```

## Writing to the Ports

To write to the Output Pins simple repeat the Above without the ! character. The following example code sets the I/O8 pin on port B to high and the remaining pins as low.

IOValB = 128 ' I/O8 high, all the rest low MSComm1.Output = "A" + Chr\$(IOValB)



### **Reading from the Ports**

To Read the Input Pins is a bit more complicated as we must request the data from the module, wait for it to arrive and then retrieve the data from the port. The following example reads the value from port A.

MSComm1.Output = "a" ' Request data from port A

T = Timer 'Use the Timer to allow the program to continue if there is an error While Timer < T + 0.4 And MSComm1.InBufferCount < 1 Wend

If MSComm1.InBufferCount <> 1 Then

Call MsgBox("Read Timeout", vbInformation, "USBIO24 VERSION 3 Error")

Exit Sub

End If

Dim TempBuffer As Variant Dim ByteBuffer() As Byte TempBuffer = MSComm1.Input ByteBuffer = TempBuffer PortAVal = ByteBuffer(0)



### Hardware Configurations outlined on the schematic for the USB I/O 24

The USB I/O 24 V3 has a number of different hardware configurations that can be implemented. Each of the configurations are listed below:

### **Bus Powered (FTDI Chip)**

The bus powered mode draws power from the USB Bus. This option is the current configuration that is used when the USB I/O 24 is sent out.

### **Self Powered (FTDI Chip)**

The self-powered mode of operation draws power from its own external Power supply and doesn't draw any current from the USB Bus.

Note: The FTDI chip can only be bus powered or self powered

### **Powering SX 52 Options**

There are a number of different ways that the UBICOM SX52 micro controller can be powered. These various options are shown below.

Note: When the SX52 is powered from the USB this also means that the USB Bus will also power the FTDI FT245BM.

#### USB 5V

The SX52 draws it power from the USB Bus.

#### **USB 3.3V**

The SX52 draws it power from the USB Bus, but a 3.3V regulator regulates the voltage provided by the USB. Note: This 3.3V regulator is not currently placed on the board and is only provided as a separate option.

#### External 5V


The SX52 draws it power from its own external power supply

#### External 3.3V

The SX52 draws it power from its own external power supply, but the voltage provided by the power supply can be either set to the desired 3.3V or regulated by a 3.3V regulator. Note: This 3.3V regulator is not currently placed on the board and is only provided as a separate option.



## Location of Links on USB I/O 24 PCB for various configuration setups

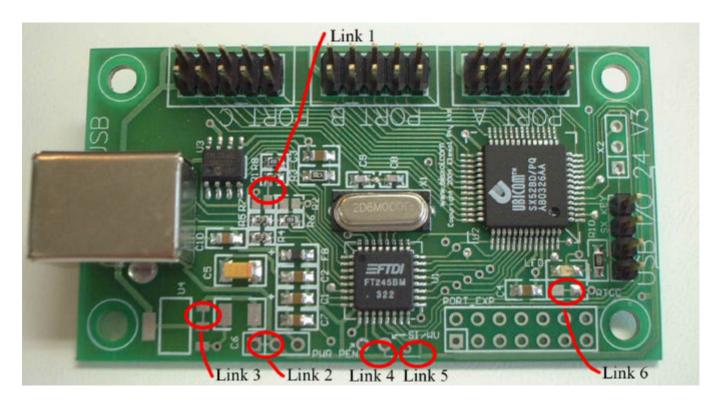

**Link 1** = remove link to use FTDI chip in Self Powered mode. Also remove components C10 and FB. Place components R2, R6, R7. Apply an external power supply (5V MAX) to pin 2 of PWR Connector.

**Link 2** = remove if the SX52 and the ports are to be powered by and external Power Supply. Apply an external power supply (5V MAX) to pin 1 of PWR Connector once the link has been removed.

**Link 3** = used for to provide a direct connection to the External Power supply for the SX52 and ports. Remove link if placing the 3.3V Regulator


**Link 4** =Links SIWU to VCC and VCCIO. Note: This pin when not being used is tied to VCCIO

**Link 5** =Link between VCC FTDI and VCCIO. This link must be removed if the interface voltages between the FTDI and SX52 are different (3V3 to 5V interface) or the SX is being powered by an external supply (not pushing external power into the USB bus).

**Link 6** = Connected to the RTCC pin on the SX52.



## **Schematic**

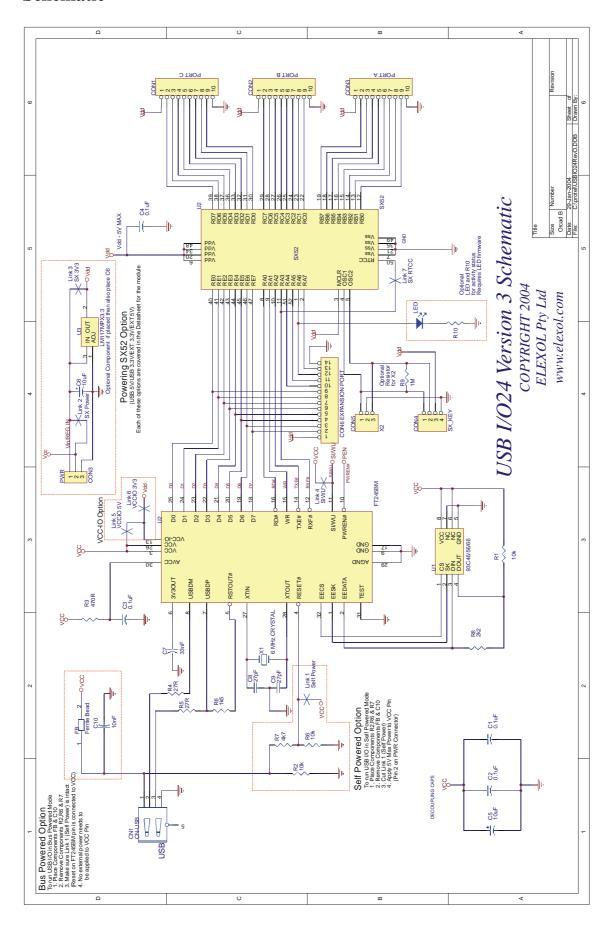



## **Absolute Maximum Ratings**

Subjecting the device to conditions outside these rating will invalidate the product warranty and may cause irreparable damage the device.

Maximum Voltage on Any Pin (referenced to GND)	5.1 V DC
Minimum Voltage on Any Pin (referenced to GND)	-0.1V DC
Supply current when USB enumerating	55mA
Supply current when running with no load on I/O pins	32mA
Total Current to or from Any Single I/O Pin	30mA
Total Current to or from Any PORT (8 Single I/O make a PORT)	50mA
Total Current in or out of all the module's I/O pins	200mA

## **Further Reading and Examples**

More information and examples for the USBIO24 VERSION 3 can be found on our websites at <a href="https://www.elexol.com">www.elexol.com</a>

Updated drivers and further information about the USB interface chip can be found at the FTDI website <a href="www.ftdichip.com">www.ftdichip.com</a>

Information about the SX52 micro controller can be found on the UBICOM website at <a href="https://www.ubicom.com">www.ubicom.com</a>



## **Technical Support and Further Information**

For any questions relating to the USBIO24 VERSION 3 please contact us by Email, Fax or Phone.

Email: support@elexol.com

Fax: +61 755 743988 Ph: +61 755 743833

Elexol Pty Ltd Elexol Pty Ltd
Level 2 PO Box 5972
Commerce Centre GCMC

146 Bundall Road, Bundall Queensland 9726

Queensland 4217 Australia

Australia

### **Product Use Limitations, Warranty and Quality Statement.**

The USBIO24 VERSION 3 should not be used in any situation where it's failure or failure of the PC or software controlling it could cause human injury or severe damage to equipment. This device is not designed for or intended to be used in any life critical application.

The USBIO24 VERSION 3 is warranted to be free from manufacture defects for a period of 12 months from the date purchase.

Subjecting the device to conditions beyond the Absolute Maximum Ratings listed above will invalidate this warranty.

The USBIO24 VERSION 3 is a static sensitive device, anti static procedures should be used in the handling of this device.

All USBIO24 VERSION 3 units are extensively tested at time of manufacture to be free of defects.

Elexol is committed to providing products of the highest quality. Should you experience any product quality issues with this product please contact our quality assurance manager at the above address.

### Disclaimer.

This product and its documentation are provided as-is and no warranty is made or implied as to their suitability for any particular purpose.

Elexol Pty Ltd will not accept any claim for damages arising from the use of this product or documentation.

This document provides information on our products and all efforts are made to ensure the accuracy of the information contained within. The specifications of the product are subject to change and continual improvement.